


BUILT-IN GRILLS, DOORS & DRAWERS

BUILT-IN GRILLS, DOORS & DRAWERS

DIMENSIONS IN INCHES

FOR ALL BUILT-IN UNITS
Must provide proper ventilation
...whether LP or NG.

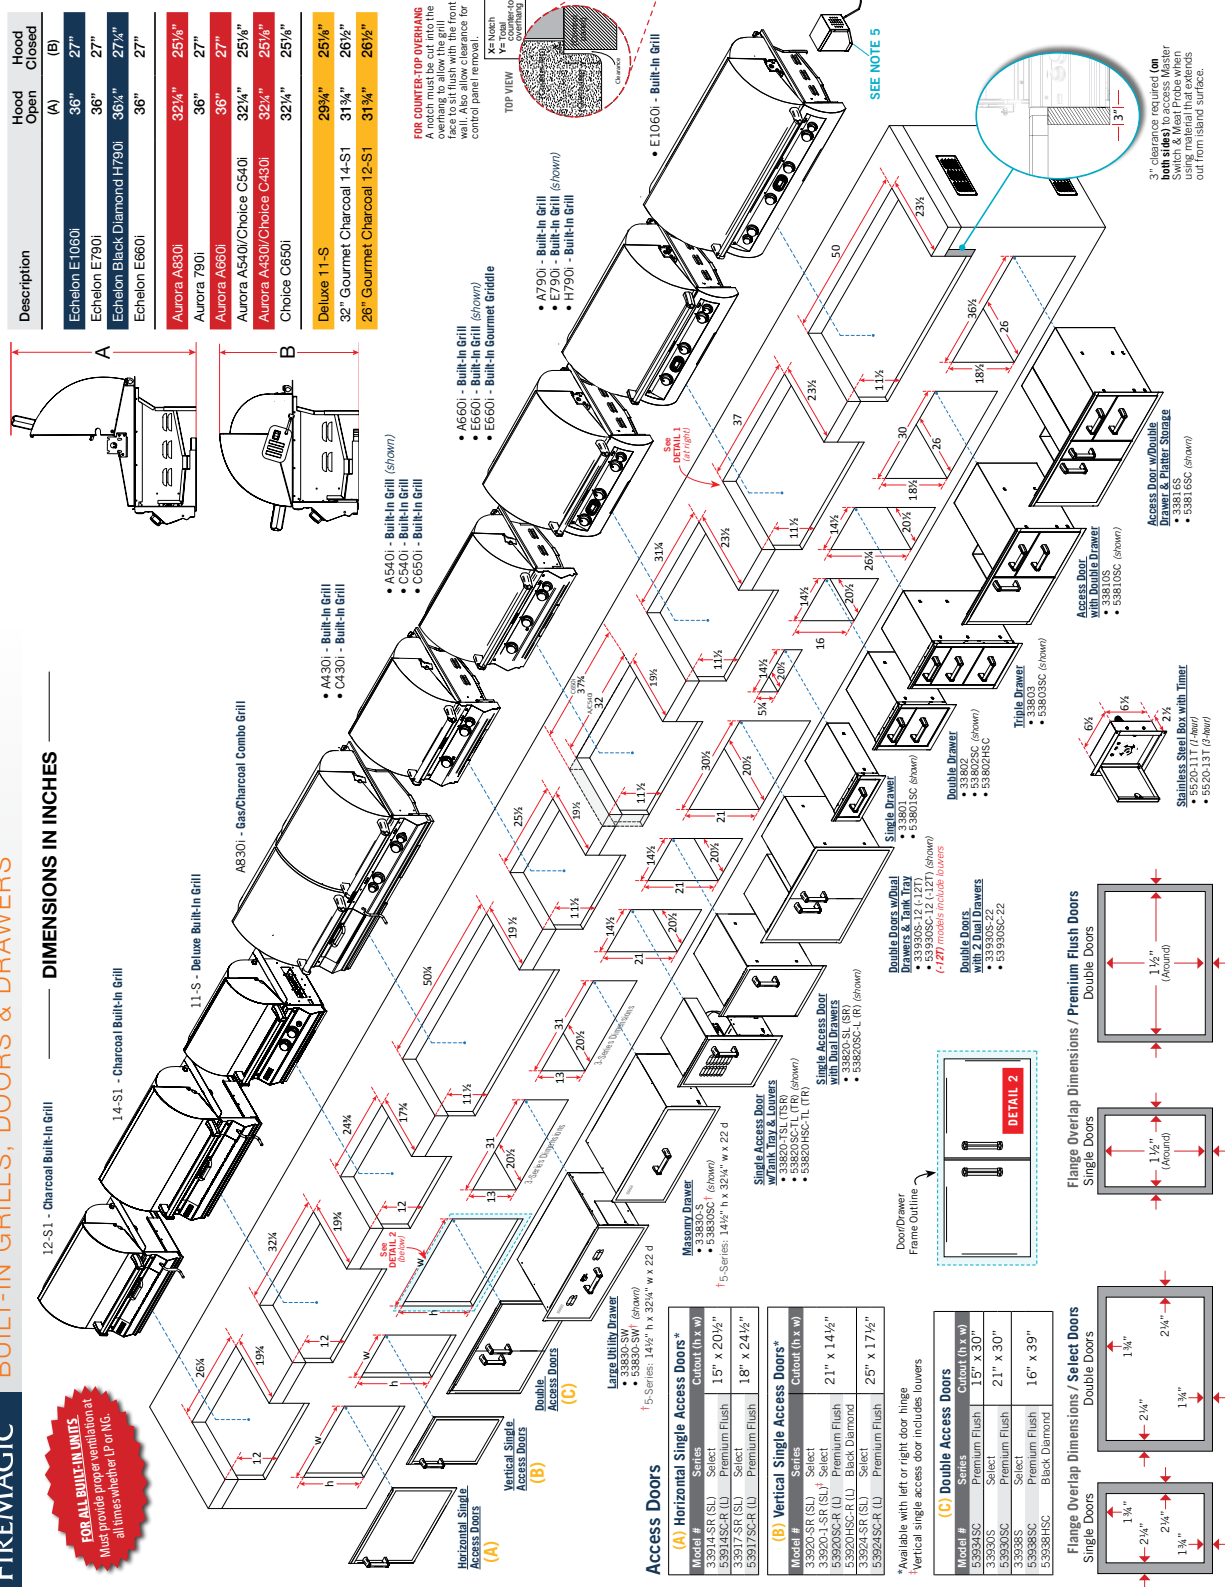

OUTDOOR KITCHEN CONSIDERATIONS

- Carefully consider grill size & accessories needed
- Combustible construction requires insulating liner
- Select Natural or Propane (L.P. gas)
 - Determine total gas consumption for supply line size
 - Access is required to gas connections and shut off valve
 - Plan location of propane tank away from grill and appliances
 - Always refer to the installation and operating instructions of your Fire Magic grill and/or accessories for installation guidelines & safety warnings, before starting your project
 - Always check all gas connections for leaks

LOCATION

- Identify outdoor area where grill will be installed
 - Determine the utilities needed (gas, water, electricity, drainage, etc.)
 - Consider element exposure (sun, wind direction*, weather, etc.)
- * Wind blowing into or across the rear over lid vent can cause poor performance and/or dangerous overheating. Orient the grill so that the prevailing wind blows toward the front of the grill.

MATERIALS

- Foundation - concrete
- Base - brick, stone, stucco, concrete
- Counter-top - tile, granite, marble, concrete

COUNTER-TOP
TOP VIEW

DETAIL 1


Grill hanger varies in width (2½-3") depending on the size & configuration of the grill.

Notes

1. There is a hanger on three sides of each grill. You must allow clearance for the hanger (See Detail V).
2. The control panel (face) of the grills is **wider** than the grill opening. There is a clearance at the top of the grill and right hand sides.
3. Clearance of 10" on each side of the grill is recommended for unrestricted operation of lid and rollers and at least 3" at the rear flange for ease of maintenance and proper operation. (18" from combustible surroundings on each side and rear is required)
4. Insulating liners must be used & are available for combustible surrounds (See page 6).
5. The roller/motor on all models is located on the right side of the grill. Optional Reverse Brackets are available to mount roller/motor on opposite side. ONLY units with the burner option come with roller/motor kit and brackets.

BUILT-IN KEGATOR ONLY


DIMENSIONS IN INCHES

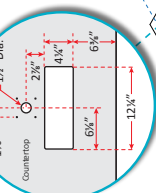

CLASSIC CHARCOAL BUILT-IN GRILLS			
Model #	Description	Opening Required	Clearance Required
3332A	32" Lift-A-Fire Charcoal	32 1/4" x 19 1/2" x 12"	12"
3339	24" Lift-A-Fire Charcoal	24 1/4" x 17 1/4" x 12"	12"
3324	31" Firemaster 3324	31 1/4" x 21 1/4" x 12"	12"
3329	24" Firemaster 3329	24 1/4" x 19 1/4" x 12"	12"


Pedestal Grill Dimensions

- A430s-7EAP-P6
- A430s-8EAP-P6
- C430s-RT1P-P6

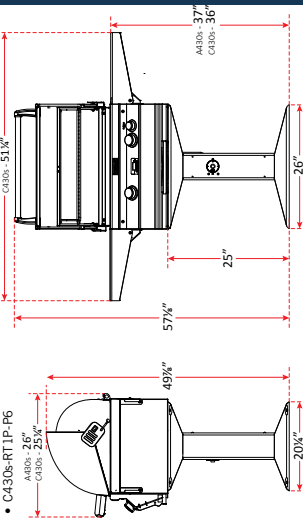

Notes

- There is a hanger on three sides of the grill (SEE DETAIL 3).
- The control panel (face) of the accessories is wider than the cabinet width, this conceals the cutout space on the left & right hand sides.
- Clearance of 10" on each side, and 3" at the rear of the oven is recommended for unrestricted operation of accessories. (18" clearance is required for the oven).
- Insulating liner must be used and are available for combustible non combustible surroundings on each side and rear.
- Accessories are available for the oven, including the 1 and 2 Burner (3280) and 1 and 2 Burner (3280) do not require an insulating liner (See page 6).

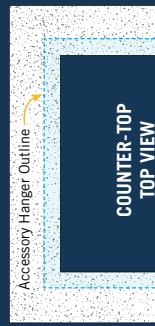


COUNTER-TOP TOP VIEW

DETAIL 3

Accessory hanger in width of the counter-top grill. The hanger is on the size & configuration of the accessory.


FOR COUNTER-TOP OVERHANG

The overhang allows the accessory face to sit flush with the counter-top. This allows for easy panel removal.

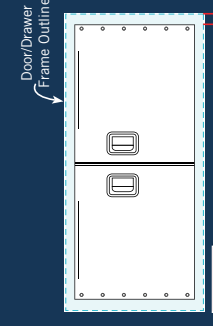

DETAIL 4

Door frame varies in width (14 1/2" ALL AROUND) depending on the size & configuration of the door & drawer.

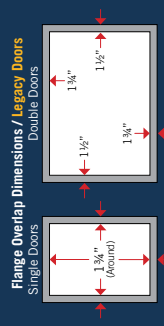

Flange Overlap Dimensions / Legacy Doors

Double Doors

Single Doors

FIREMAGIC

DROP-IN GRILLS, ACCESSORIES, DOORS & DRAWERS

The information provided is for reference purposes only. Detailed instructions and specifications unique to the product purchased can be found in the Manufacturer's Owner's Manual.