


# **CUT OUT DIMENSIONS**



The information provided is for reference purposes only. Detailed instructions and specifications unique to the product purchased can be found in the Manufacturer's Owner's Manual.

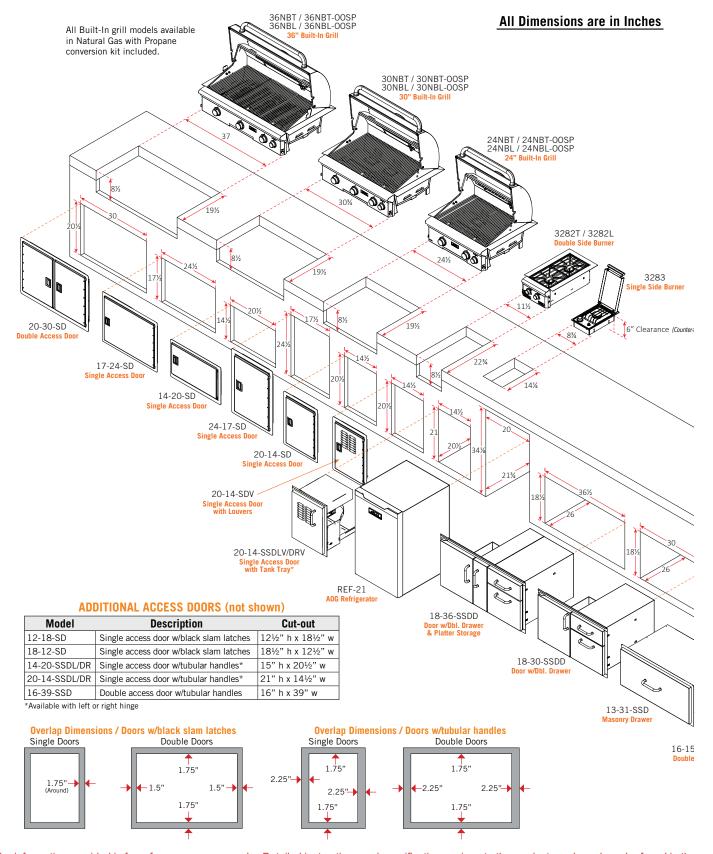

# **CUT OUT DIMENSIONS**


**TOP VIEW** 

SIDE VIEW

(Counter-top)

(Overhang)

Counter-top overhang

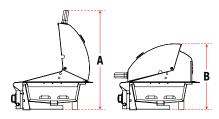



# **Built-In Grills Height Dimensions**

Description	Hood Open (A)	Hood Closed (B)
24NBT/24NBL	30½"	20"
30NBT/30NBL	30½"	20"
36NBT/36NBL	30½"	20"

The control panel is designed to sit flush against the enclosure front wall. If the enclosure counter-top extends beyond the front wall, creating a counter-top overhang, it must be cut flush with the front wall for the width of the control panel or a gap will be created exposing the forward portions of the left and right side grill fire walls.

**ISLAND COUNTER-TOP OVERHANG** 

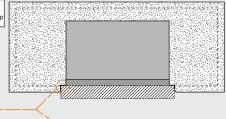


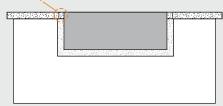

top to unit bottom)

### **Grill Insulating Liners**

(mast be used when mistaming in a combastible island)			
Model	Description	"A" Cut-out	
24-IL-C	24" Grill Insulating Liner	285/8"	
30-IL-C	30" Grill Insulating Liner	345/8"	
36-IL-C	36" Grill Insulating Liner	405/8"	

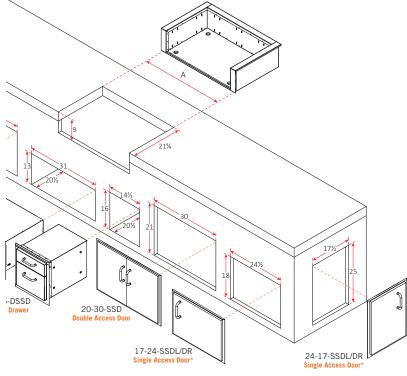


\*Available with left or right hinge

### "L" SERIES ELECTRICAL SPECIFICATIONS

- "L" Series grills require 120VAC (5 AMP min.) power to operate
- Power supply rating 120VAC / 0.3A / 60 Hz
  Oven lights rating 12V / 10 watt halogen bulb

#### "L" SERIES BUILT-IN GRILL WIRING DIAGRAM \*

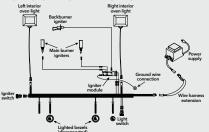

\*24" model shown. Model wire diagrams vary between models, a wire diagram specific to each unit can be found affixed to the inside of the control panel.

# **OUTDOOR KITCHEN CONSIDERATIONS**

- · Carefully consider grill size & accessories needed
- · Combustible construction requires insulating liner
- Select Natural or Propane (LP gas)
- Determine total gas consumption for supply line size
- · Access required to gas connections and shut off valve
- Plan location of propane tank away from grill and appliances
- Always refer to the installation and operating instructions of your American Outdoor Grill® and/or accessories for installation guidelines & safety warnings before starting your project
- · Always check all gas connections for leaks
- Provide ventilation in island for gas vapors. Allow at least four ventilation openings (two at floor level and two 16" above floor 10 in<sup>2</sup> each) at opposing ends/sides

#### LOCATION

- · Identify outdoor area where grill will be installed
- Determine the utilities needed (gas, water, electricity, drainage, etc.)
- Consider element exposure (sun, wind direction, weather, etc.)

# **MATERIALS**

- · Foundation concrete
- · Base brick, stone, stucco, concrete
- Counter top tile, granite, marble, concrete

The information provided is for reference purposes only. Detailed instructions and specifications unique to the product purchased can be found in the Manufacturer's Owner's Manual.